26 January, 2015, www.brodit.com, © 2015 Brodit AB

Product 654804

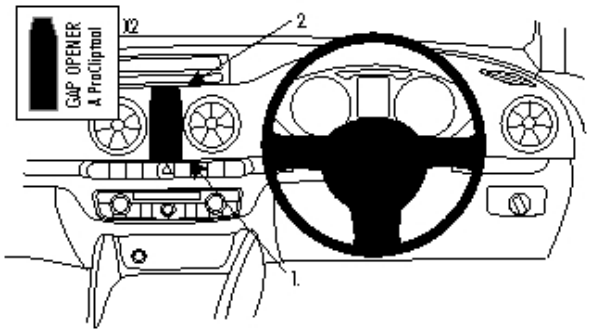

654804 ProClip

Center mount

The ProClip is a mounting bracket for the vehicle's dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320286548045

Item no 654804 fits:
Audi A3 13-15 (England)
Audi S3 13-15 (For all countries)

INSTALLATION INSTRUCTIONS

1.

2.

3.

4.

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap openers into the gap between the trim surrounding the buttons and the dashboard, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the lower part of the ProClip into the gap between the gap openers. Press the lower part of the ProClip into the gap, in the same time flip the upper part upward/forward so the lower angled edge hooks behind the trim surrounding the buttons. Pull out the gap openers.

2. Press the gap openers into the gap between the dashboard and the frame surrounding the compartment. Pull the upper part of the ProClip upward and hook the angled edge into the gap between the gap openers.

3. Press down on top of the ProClip so the angled edge goes all the way into the gap. Pull out the gap openers.

4. The ProClip is in place.